

MAJOR COMPONENTS (Information you need to operate this motorcycle)

▲ WARNING

*** If the Pre-ride Inspection (page 51) is not performed, severe personal injury or vehicle damage may result.**

SUSPENSION

Front Suspension

Spring preload:

Adjust the spring preload by turning the preload adjuster (1) with the 22 mm box end wrench provided in the tool kit.

To reduce (SOFT) :

Turn the adjuster counterclockwise toward SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise toward HARD for a firmer ride and rough road condition.


Standard position:

To return to the standard position, turn the adjusters until the 4th groove from the top aligns with the top surface of the fork caps.

NOTE:

* Adjust both right and left adjusters to the same position.

Standard position

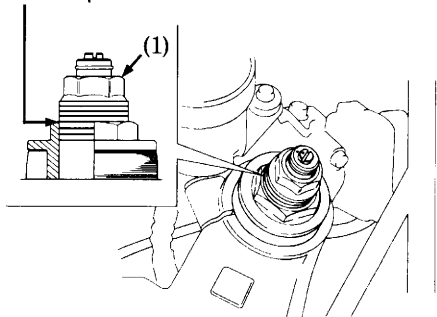

(1) Preload adjuster (both sides)