


FUEL TANK MAINTENANCE POSITION

The front of the fuel tank can be tilted up for maintenance.

The fuel tank does not require draining.

To raise:

1. Check that the fuel fill cap is closed.
2. Remove the two bolts (1) with washers.
3. Remove the two bolts (2) and two screws (3).

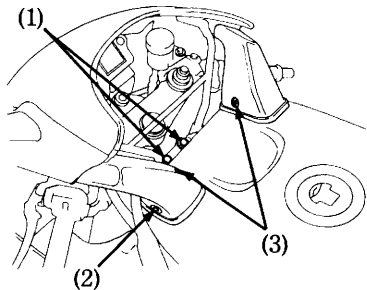


(1) Bolts

(3) Screws

(2) Bolt (both sides)

4. Remove the air guides (4).

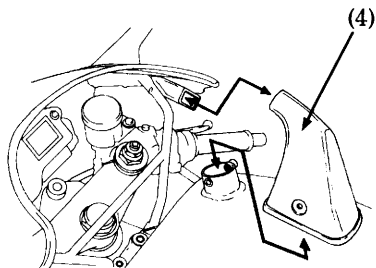

(4) Air guide (both sides)