


- Remove the oil filter (7) with a filter wrench and let the remaining oil drain out.
- Apply a thin coat of engine oil to the new oil filter rubber seal (8).
Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

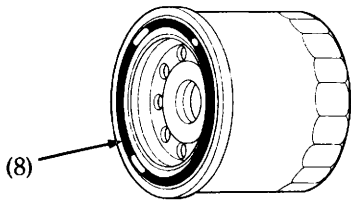

(8) Oil filter rubber seal

- Install the new oil filter and tighten it to the specified torque:


26 N·m (2.6 kg-m , 19 lb-ft)

If a torque wrench is not available, tighten the oil filter as follows:

- Install and hand tighten the oil filter fully.
- Tighten the oil filter 1/12 turns according to the indicator (9) with the oil filter wrench (10).

NOTE:

- * Use the numbers (1 to 12) printed on the outer surface as a reference when tightening the oil filter. Turn the oil filter to the next number.

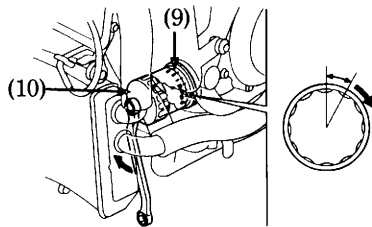

(9) Indicator

(10) Oil filter wrench