

## WHEEL REMOVAL


(Refer to the maintenance precautions on page 67).

### Front Wheel Removal

1. Support the motorcycle with the maintenance stand (page 68).
2. Raise the front wheel off the ground by hoisting the top bridge.
3. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

#### CAUTION:

- \* To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

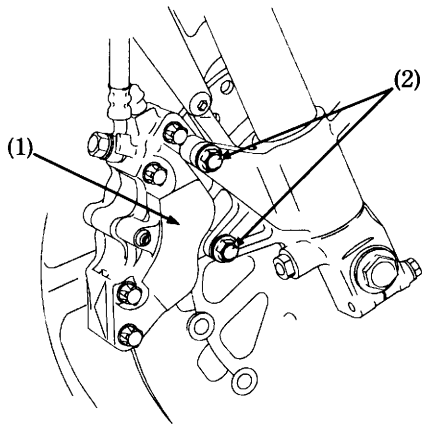

- (1) Brake caliper assembly  
(2) Fixing bolts