

Main fuse A:


The main fuse A (1) is located below the seat. The specified fuse is:

30A

1. Remove the seat (page 43).
2. Disconnect the wire connector (2) of the stator magnetic switch.
3. Pull out the old fuse and install a new fuse.

The spare fuse (3) is located on the battery band.

4. Reconnect the connector and install the seat.

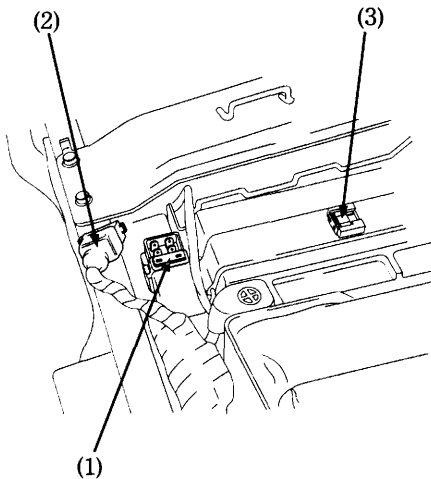

(1) Main fuse A
(2) Wire connector

(3) Spare fuse