

## Changing Clutch Oil Filter (VFR1200XD only)

Use a new Honda Genuine clutch oil filter or equivalent specified for your model.

### NOTICE

Using the wrong clutch oil filter can result in serious damage to the transmission.

1. Follow the steps 1-7 of Changing Engine Oil & Filter. ➡ P. 69

2. Remove the clutch oil filter cover, clutch oil filter and spring by removing the clutch oil filter bolts A and B.

► Discard the oil and clutch oil filter at an approved recycling centre.

