- 6. Remove the battery. Store in an area protected from freezing temperatures and direct sunlight. Check the electrolyte level and slow charge the battery once a month.
- 7. Wash and dry the motorcycle. Wax all painted surfaces. Coat chrome with rustinhibiting oil.
- 8. Inflate the tyres to their recommended pressures. Place the motorcycle on blocks to raise both tyres off the ground.
- 9. Cover the motorcycle (don't use plastic or other coated materials) and store in an unheated area, free of dampness with a minimum of daily temperature variation. Do not store the motorcycle in direct sunlight.

## REMOVAL FROM STORAGE

- Uncover and clean the motorcycle.
   Change the engine oil if more than 4 months have passed since the start of storage.
- Check the battery electrolyte level and charge the battery as required. Install the battery.
- 3. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh petrol.
- 4. Perform all Pre-ride Inspection checks (page 45).

Test ride the motorcycle at low speeds in a safe riding area away from traffic.