


Position Light Bulb

〈Except U type〉

1. Pull the position light socket (1) and remove it.
2. Pull out the bulb (2) without turning.
3. Install a new bulb in the reverse order of removal.

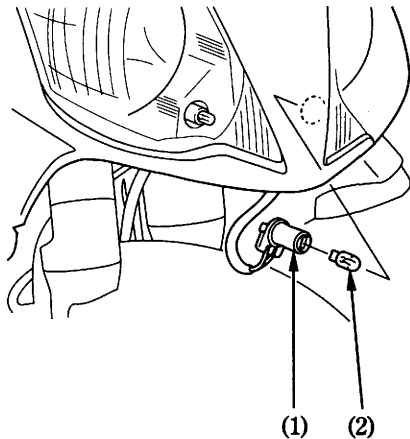

- (1) Position light socket
(2) Bulb