


If You Have a Flat Tire

- Remove the rear brake adjusting nut (8), disconnect the brake rod (9) from the brake arm (10) by pushing down on the rear brake pedal.
- Disconnect the brake stopper arm (11) from the brake panel by removing the cotter pin (12), stopper arm nut (13), washer and rubber grommet.
- Remove the axle holding bolt (14).

RIGHT REAR

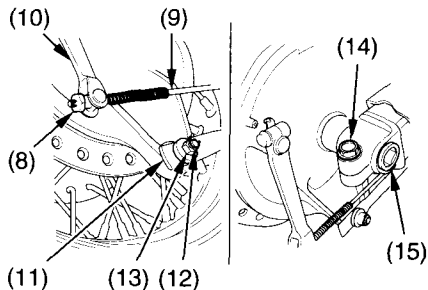

- | | |
|------------------------------|------------------------|
| (8) rear brake adjusting nut | (13) stopper arm nut |
| (9) brake rod | (14) axle holding bolt |
| (10) brake arm | (15) rear axle shaft |
| (11) brake stopper arm | |
| (12) cotter pin | |