

Troubleshooting

Engine Will Not Start	P. 87
Overheating (High coolant temperature indicator is on)	P. 88
Warning Indicators On or Flashing	P. 89
Low Oil Pressure Indicator.....	P. 89
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 89
ABS (Anti-lock Brake System) Indicator (CB1000R ABS).....	P. 90

Tire Puncture	P. 91
Electrical Trouble	P. 101
Battery Goes Dead	P. 101
Burned-out Light Bulb.....	P. 101
Blown Fuse	P. 105