

**CB1000R ABS**

When removing and installing the wheel, be careful not to damage the wheel speed sensor and pulser ring.

## Front Wheel

### Removal

1. Park on a firm, level surface.
2. Cover both sides of the front wheel and brake caliper with protective tape or cloth.
3. **CB1000R ABS**  
Remove the wheel speed sensor by removing the bolts.

