


## Electrical Trouble ► Blown Fuse

1. Remove the rear seat and front seat.  
► P. 55, 56
2. Remove the fuse box cover.
3. Pull the fuses out one by one. Check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Reinstall the fuse box cover.
5. Reinstall the parts in the reverse order of removal.

## Fuse Holder Fuses

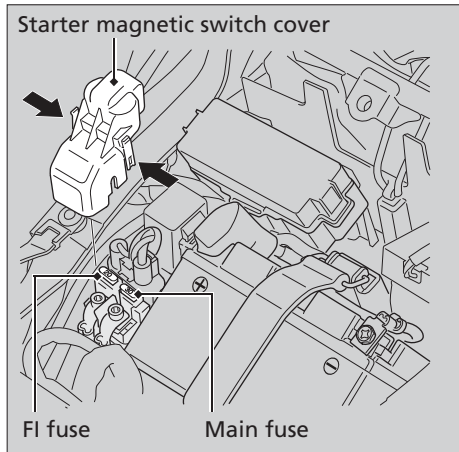

1. Remove the rear seat and front seat.  
► P. 55, 56
2. Remove the starter magnetic switch cover.