Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations	6
Indicator	7
MIL Blink Pattern	7
Current DTC/Freeze DTC	
Circuit Inspection.	8
DTC Index	