


# Front Suspension Adjustments


## Fork Oil Capacity:

Standard 26.21 lbf/in (4.59 N/mm) Fork Spring

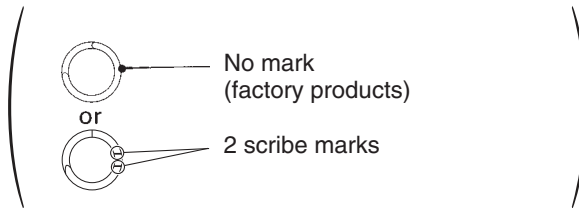


Standard oil capacity	12.1 US oz (357 cm <sup>3</sup> )	
Maximum oil capacity	13.0 US oz (384 cm <sup>3</sup> )	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.1 US oz (300 cm <sup>3</sup> )	Slightly softer as it nears full compression.

Optional Softer 25.12 lbf/in (4.40 N/mm) Fork Spring

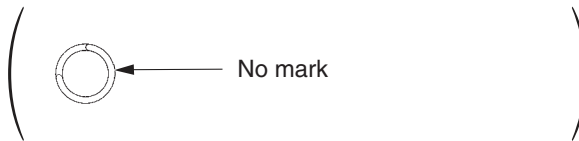

Standard oil capacity	12.0 US oz (354 cm <sup>3</sup> )	
Maximum oil capacity	12.9 US oz (381 cm <sup>3</sup> )	Slightly stiffer as it nears full compression.
Minimum oil capacity	10.1 US oz (298 cm <sup>3</sup> )	Slightly softer as it nears full compression.


Optional Stiffer 27.41 lbf/in (4.80 N/mm) Fork Spring

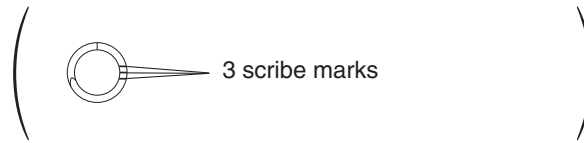

Standard oil capacity	11.8 US oz (350 cm <sup>3</sup> )	
Maximum oil capacity	12.8 US oz (377 cm <sup>3</sup> )	Slightly stiffer as it nears full compression.
Minimum oil capacity	9.9 US oz (294 cm <sup>3</sup> )	Slightly softer as it nears full compression.


Be sure the oil capacity is the same in both fork legs.

16. Install a new O-ring (15) on the fork damper assembly (5). Apply the recommended fork oil to the O-ring.
17. Pull up the fork assembly (1) slowly and install the fork damper assembly into the outer tube.

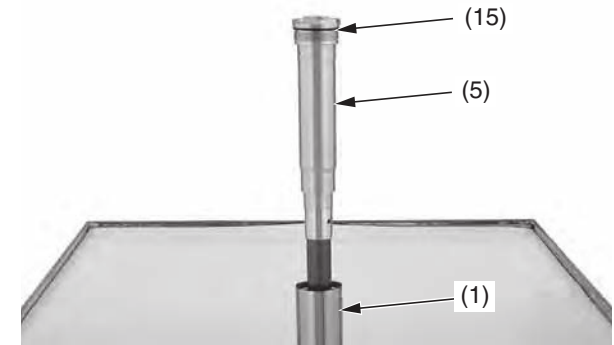

- (1) fork assembly (15) O-ring (new)  
(5) fork damper assembly

18. Insert both fork legs into the fork clamps. Tighten the fork bridge lower pinch bolts (16) to the specified torque:  
15 lbf·ft (20 N·m, 2.0 kgf·m)

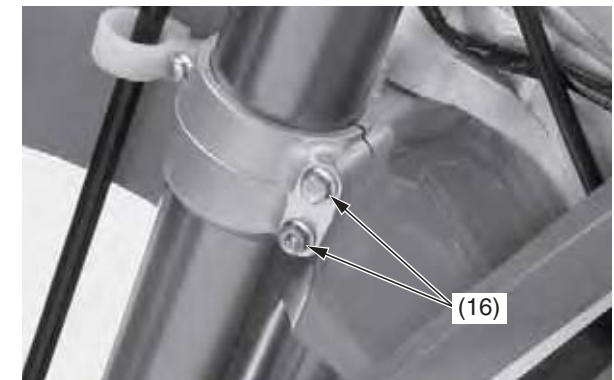

- (16) fork bridge lower pinch bolts

(cont'd)