

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		⇨	mi	600	1200	
			km	1000	2000	
		NOTE	MONTH	6	12	
	HOURS	20	100	200		
*	FUEL LINE				I	—
*	THROTTLE OPERATION				I	110
	AIR CLEANER	NOTE 1		C	C	106
	SPARK PLUG				I	117
*	VALVE CLEARANCE/ DECOMPRESSOR SYSTEM		I	I	I	120
	ENGINE OIL		INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R			88
	ENGINE OIL FILTER		REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			92
*	TRANSMISSION OIL			R	R	95
*	ENGINE IDLE SPEED		I	I	I	116
	RADIATOR COOLANT	NOTE 3		I	I	100
*	COOLING SYSTEM	NOTE 2		I	I	100

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 210).