


5. Remove the screws A.
6. Remove the handle top cover.

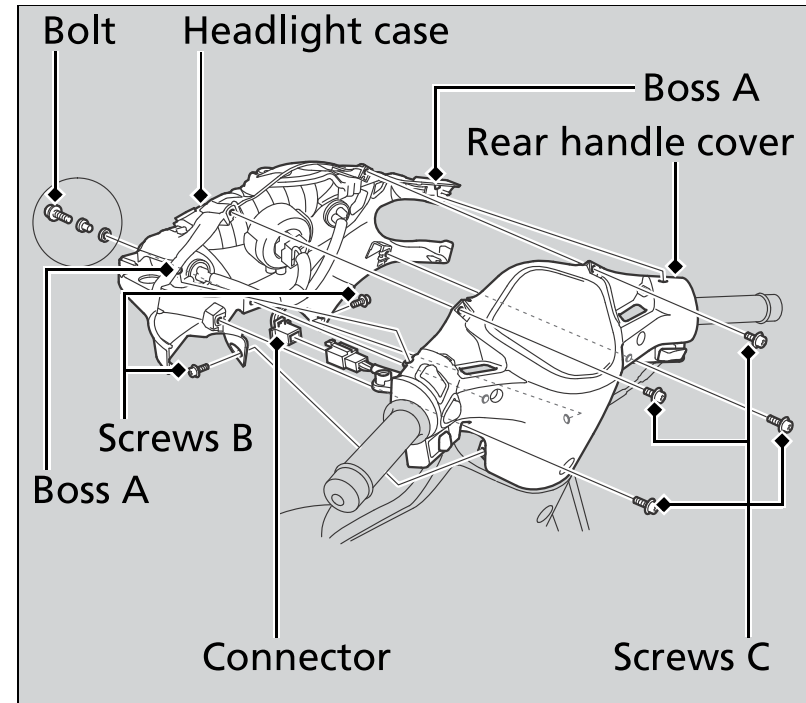

7. Remove the screws B, screws C and bolt.
8. Release the bosses A by pressing the rear handle cover.
9. Remove the headlight case, then disconnect the connector.