


Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Loosen the adjusting bolt and move the headlight up or down as necessary.

Tighten the adjusting bolt after adjustment. Obey local laws and regulations.

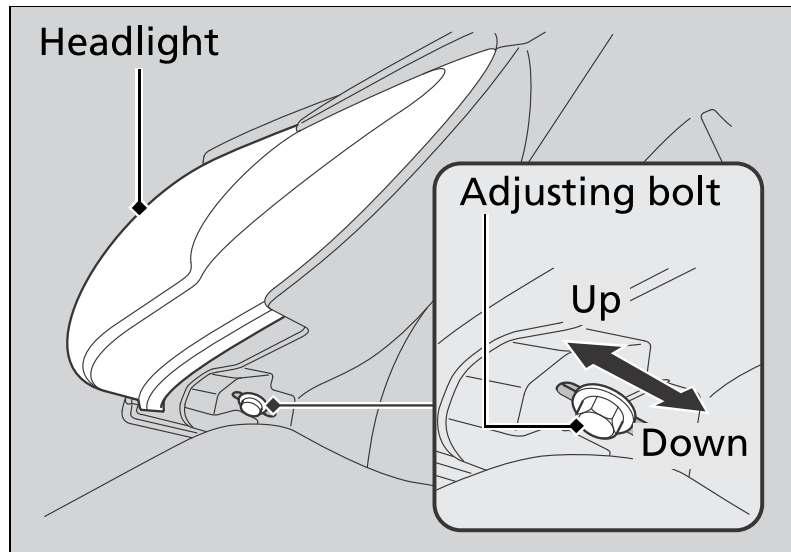

Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

