


## Front Turn Signal Bulb

1. Remove the front turn signal lens (1) by removing the screw (2).
2. Slightly press the bulb (3) and turn it counterclockwise.
3. Install a new bulb and check that the light operates properly.

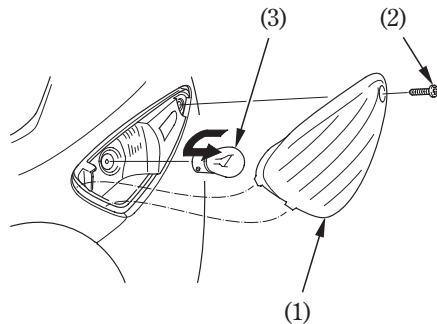

- (1) Front turn signal lens
- (2) Screw
- (3) Bulb