


## FUEL STRAINER

The fuel strainer is on the left side of the carburetor. The fine mesh screen of the strainer prevents dirt from entering the carburetor passages. Dirt which accumulates at the filter must be removed periodically, or the fuel flow will eventually be restricted.

### WARNING

- \* *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area.*
- \* *Gasoline is harmful or fatal if swallowed. Avoid repeated or prolonged contact with skin or breathing of vapor. Keep out of reach of children. If gasoline is swallowed, do not induce vomiting. Call a physician immediately.*

1. Turn the fuel valve "OFF".
2. Remove the two screws which retain the fuel valve, and remove the valve.
3. Remove the neoprene "O" ring (2) and the filter screen (1).
4. Wash the screen in non-flammable or high flash point solvent.
5. Reassemble by reversing the disassembly sequence.
6. Turn the fuel valve "ON", and check for leaks. Correct if necessary.

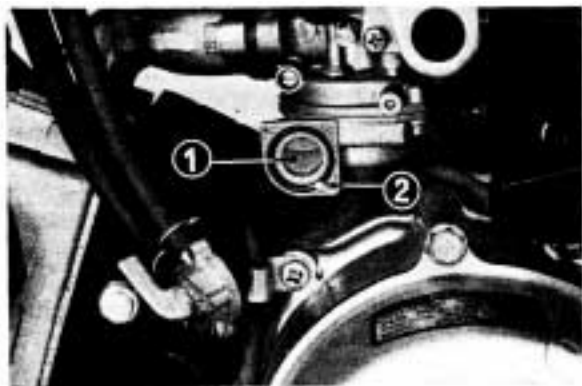

(1) Filter screen

(2) "O" ring