


## IGNITION TIMING

Set ignition timing after the contact breaker point gap has been adjusted.


1. Rotate the generator rotor counterclockwise and align the "F" mark (1) with the index mark (2). At this point the contact breaker points (4) should just start to open.
2. To adjust, loosen the two base plate locking screws (3) and move the contact breaker base plate (5) clockwise to advance the timing or counterclockwise to retard the timing.

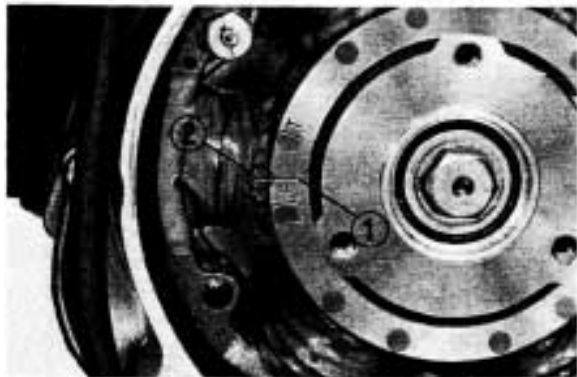

(1) "F" mark

(2) Index mark

3. After adjustment recheck the breaker point gap to be sure that it has not changed.

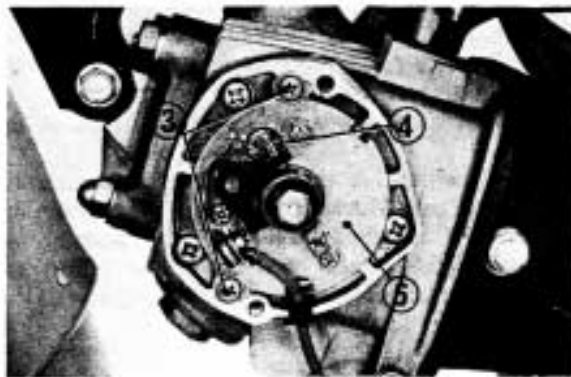

(3) Base plate locking screws

(5) Base plate

(4) Contact breaker points