

## STORAGE

Preparing the machine for storage:

1. Completely clean all parts of the machine. If the machine has been exposed to sea air or salt water, wash it down with fresh water and wipe dry.
2. Drain the fuel tank and the carburetor.

### WARNING

\* *Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*

- A. Place the carburetor drain tube (1) in a suitable container.
- B. Open the fuel drain by turning the drain screw (2) counterclockwise.
- C. Turn the fuel valve to "RES" and the fuel tank cap lever to "ON".




(1) Carburetor drain tube

3. Change the engine oil. (See page 32.)
4. Position the piston at the top of the compression stroke by pulling the starter rope until compression is felt.
5. Inflate the tires to the normal pressure and place the ATC on blocks to raise the tires off the ground.
6. Cover the machine and store in a place which is free of humidity and dust.

### NOTE:

- \* Be sure to close the fuel drain before refueling when the ATC is taken out of storage.

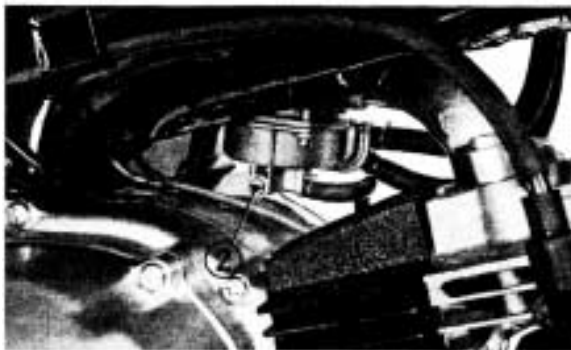

(2) Carburetor drain screw