

## BRAKES

### Brake Pedal:


Free play, measured at the end of the pedal (1), should be 15–20 mm (5/8–3/4 in.).

Adjust by turning the adjusting nut (2) located on the brake operating rod at the rear of the frame.

### Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear or corrosion.

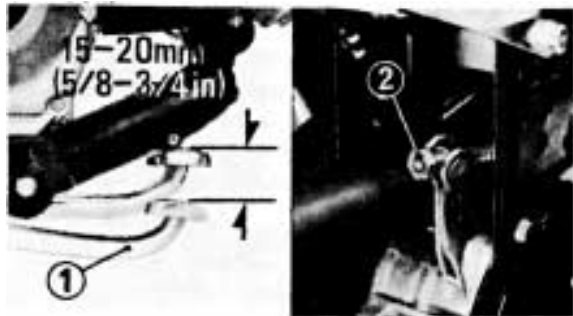

(1) Brake pedal


(2) Pedal adjusting nut

Make sure the brake arm, spring, rod and fasteners are in good condition.

### Brake Lever/Parking Brake:

Free play, measured at the tip of the brake lever (3), should be within 15–20 mm (5/8–3/4 in.).

Adjusting nuts (4) are located at the brake cable mount on the right side of the frame just behind the engine.

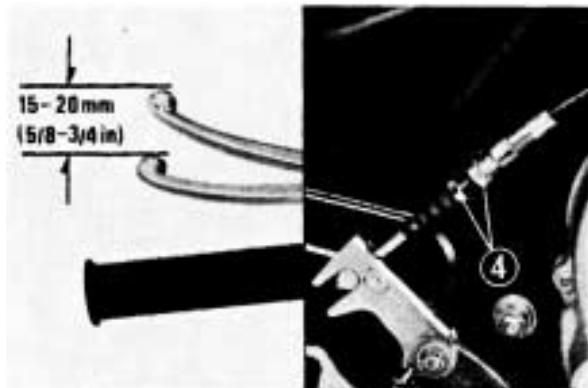

(3) Brake lever

(4) Lever adjusting nuts