


REAR WHEEL REMOVAL

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with the 12 mm socket wrench.
3. Remove the wheel.

Installation Notes:

- Reinstall the rear wheels by reversing the disassembly sequence.
Torque the wheel nuts in a cross-pattern.

Torque: 18–25N·m (1.8–2.5 kg–m, 13–18ft-1b)

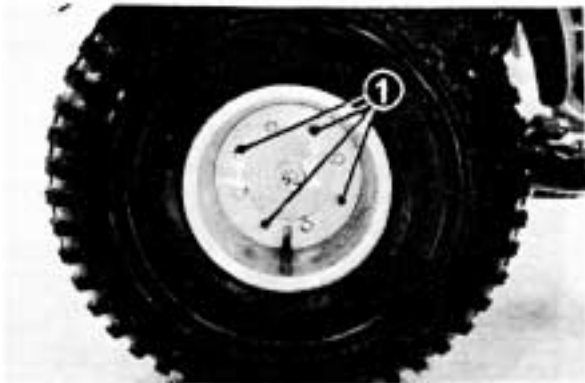

(1) Wheel nuts

