

## Reverse Indicator Lamp

The Big Red is equipped with a reverse indicator lamp to show when the Posi-Torque Speed Range and Reverse Selector lever is in Reverse position.

### CAUTION:

- \* *Before moving the lever to the reverse position, make sure the transmission is in neutral.*



(1) Reverse indicator lamp


## Engine Stop Switch

The three position engine stop switch (1) is next to the left handlebar grip. In RUN, the engine will operate. In either OFF position, the engine will not operate.

This switch is intended primarily as a safety or emergency switch and should normally remain in RUN.

### NOTE:

- \* If your ATC is stopped with the ignition switch ON and the engine stop switch OFF, the headlight will still be on, resulting in battery discharge.

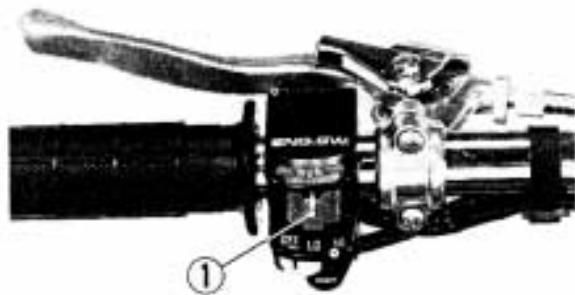

(1) Engine stop switch