


## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.

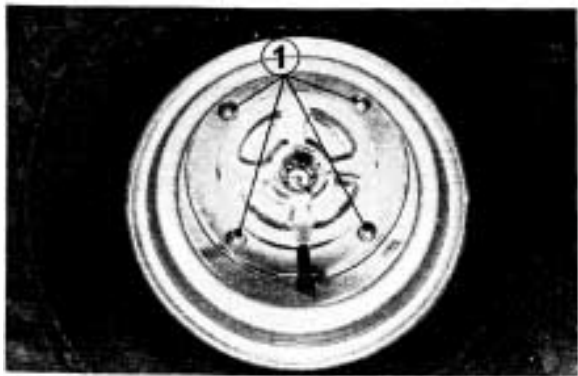

(1) Wheel nuts

## Installation Notes:

Reinstall the rear wheels and tighten the wheel nuts (1) in a cross pattern to 20–25 N·m (2.0–2.5 kg·m, 14–18 ft·lb).

### **WARNING**

\* *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*