

PARTS FUNCTION

Ignition Switch

The three position ignition switch (1) is under the headlight switch. At RUN, the engine will operate. In either OFF position engine will not operate.




(1) Ignition switch

Headlight switch

The headlight switch (2) is above the ignition switch and turns the headlight on or off.

Headlight dimmer switch

Select Hi for high beam, Lo for low beam.

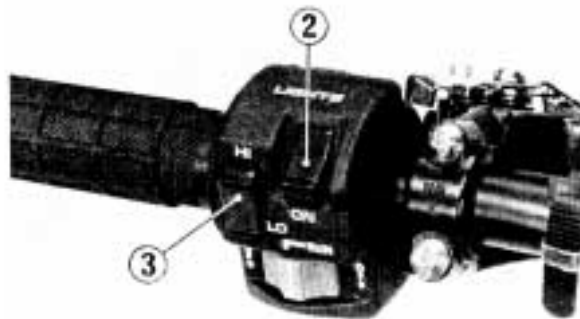

(2) Headlight switch (3) Headlight dimmer switch