


## ENGINE OIL STRAINER SCREEN

The oil filter screen should be cleaned in accordance with the Maintenance Schedule on page 35.

1. Drain the engine oil.
2. Remove the right footpeg (1), kickstarter pedal (2) and rear brake pedal (3).
3. Disconnect the clutch cable (4).
4. Remove the right crankcase cover (5).
5. Remove the oil strainer screen (6) from the crankcase.
6. Clean the oil strainer screen.

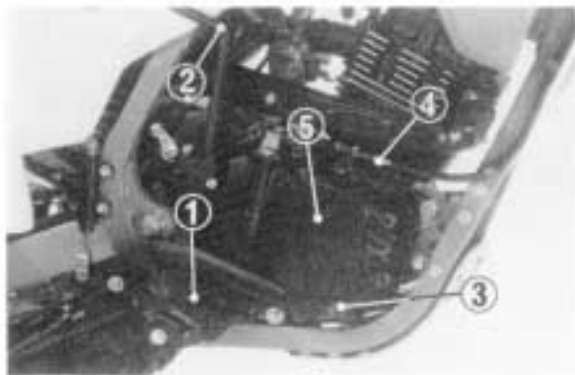

(1) Footpeg


(2) Kickstarter pedal

(3) Rear brake pedal

(4) Clutch cable

### Installation

- Reinstall the oil strainer screen by reversing the disassembly sequence.
- Tighten the right crankcase cover bolts to 7–11 N·m (0.7–1.1 kg·m, 5–8 ft·lb) torque.

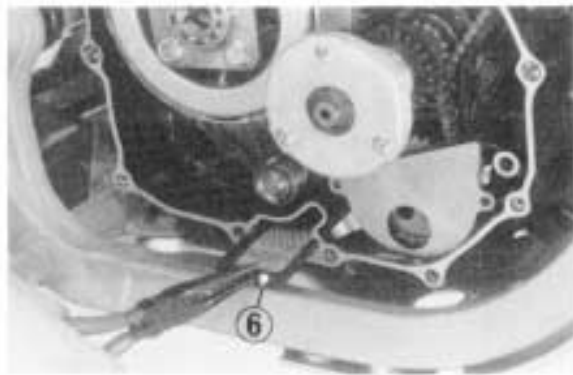

(5) Right crankcase cover

(6) Oil strainer screen