

## AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC200X is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the seat/rear fender by sliding the lever (1).
2. Remove the air cleaner cover (2) by removing the four clips (3).
3. Remove a screw attaching the air cleaner element holder (4) and remove air cleaner element (5).



(1) Lever

(2) Air cleaner cover


(3) Clips

4. Wash the air cleaner element (5) in clean non-flammable or high flash point solvent. Allow it to dry thoroughly.

### **WARNING**

\* *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*

5. Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.
6. Reassemble by reversing the disassembly sequence.

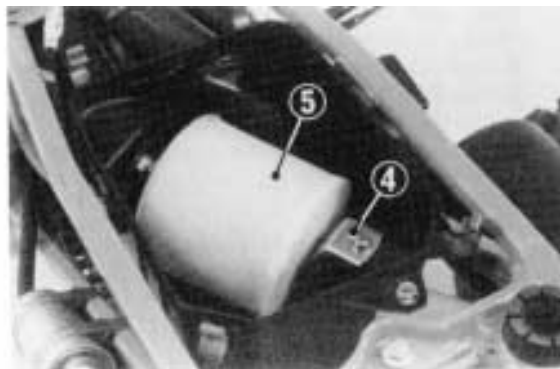

(4) Air cleaner element

(5) Air cleaner element holder