

SPARK ARRESTER

The exhaust system must be periodically purged of accumulated carbon.

To remove carbon:


1. Remove the spark arrester fasteners (1) and spark arrester plate (2).

WARNING

- * *Do not perform this operation immediately after the engine has been run because the exhaust system becomes very hot.*
 - * *Because of the increased fire hazard ensure that there are no combustible materials in the area when purging the spark arrester.*
 - * *Wear eye protection.*
 - * *Do not stand behind the vehicle while purging the carbon from the spark arrester.*
 - * *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas.*
2. Start the engine, and purge accumulated carbon from the system by momentarily revving up the engine several times.
 3. Stop the engine and allow the exhaust pipe to cool.
 4. Reinstall the spark arrester plate.

CAUTION:

- * *The two mounting screws (3) must be installed in the spark arrester body at all times for the spark arrester to be effective.*

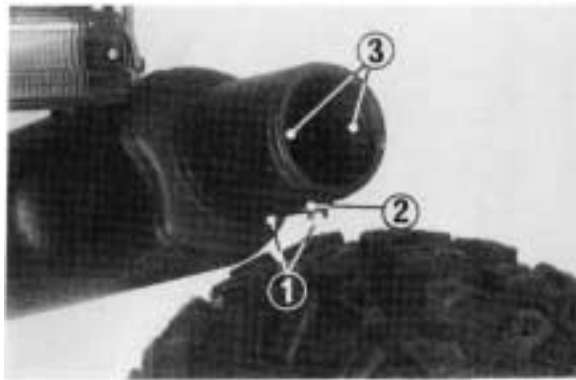

- (1) Spark arrester fasteners (3) Screws
(2) Spark arrester plate