


ENGINE UNDER GUARD AND SKID PLATE

The engine under guard (1) and skid plate (2) protect the engine and rear differential from rocks.

Check the under guard and plate for cracks, damage or looseness at intervals shown in the Maintenance Schedule (page 44).

Replace the under guard and plate with new ones if they are cracked or damaged.

If the under guard and plate bolts are loose, tighten them to 24–30 N·m (2.4–3.0 kg·m, 17–22 ft·lb) torque.

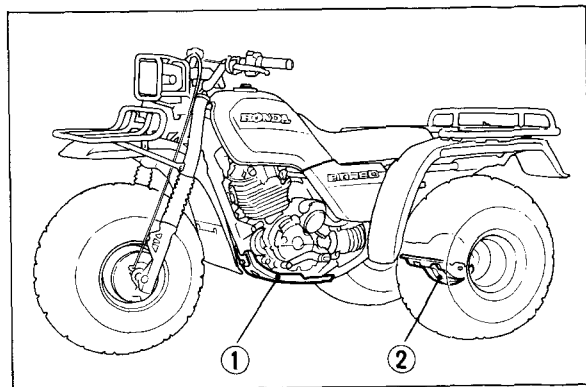

(1) Engine under guard

(2) Skid plate