
Contact Breaker Point Gap and Ignition Timing Adjustment	31
Spark Plug Replacement and Adjustment	32
Air Cleaner Maintenance	33
Throttle Cable Inspection and Adjustment	34
Carburetor Adjustment	35
Fuel Strainer Maintenance	36
Cam Chain Adjustment	37
Clutch Adjustment	38
Spark Arrester Maintenance	39
RIDING THE HONDA ATC	40
Safety Precautions	41
Turning Maneuvers	42
Skidding	44
Climbing Hills	46
Descending Hills	48
Traversing Slopes	49

Riding Through Water	50
Tire Care	51
Transporting the ATC	52
Fuel	52
Removing the Rear Wheels	53
Installing the Rear Wheels	54
Removing the Front Wheel	55
Installing the Front Wheel	56
OPTIONAL PARTS	57
SPECIFICATIONS	58
WIRING DIAGRAM	59