

## FUEL VALVE

The fuel valve is on the left side of the carburetor.

### “OFF” position


In this position the fuel flow will be cut off. Whenever the vehicle is not in use, set the valve to this position.

### “ON” position

In this position fuel will flow to the carburetor. When the engine is to be operated, set the valve to this position.

### “RES” position

The fuel valve should be set in this position only after the regular fuel supply has been consumed. The reserve full capacity is approximately 0.8 liter (0.2 US gal). When it is necessary to switch to “RES” the rider should refill the fuel tank.

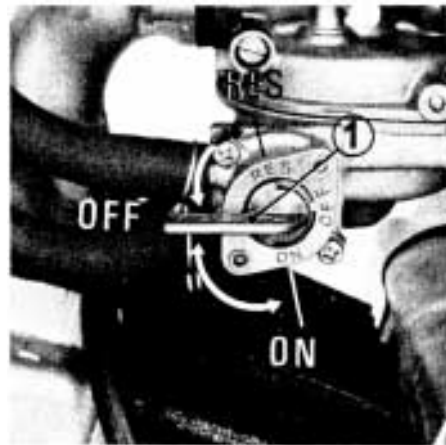

① Fuel valve lever