

**REGULAR
SERVICE PERIOD
EVERY 30
OPERATING DAYS**

NOTE

Change oil every
30 operating days
or every 3
months, which-
ever occurs first.

EVERY YEAR

- ENGINE OIL - Change.
- SPARK PLUG - Clean and adjust gap, or replace if necessary.
- *CONTACT POINTS AND IGNITION TIMING - Clean, check, and adjust or replace if necessary.
- *VALVE CLEARANCE - Check and adjust if necessary. COLD
- *CAM CHAIN TENSION - Adjust
- POLYURETHANE FOAM AIR FILTER ELEMENT - Clean and oil. Service more frequently if operated in dusty areas.
- *CARBURETOR - Check and adjust if necessary. HOT

- THROTTLE OPERATION - Inspect cable. Check and adjust free play.
- *CLUTCH - Check operation and adjust if necessary.
- DRIVE CHAIN - Check, lubricate, and adjust if necessary.
- BRAKE CONTROL LINKAGE - Check linkage and adjust if necessary.
- TIRES - Inspect and check air pressure.
- SPARK ARRESTER - Purge.
- ALL NUTS, BOLTS, AND OTHER FASTENERS - Check security and tighten if necessary.

- FUEL FILTER SCREEN - Clean.
- FUEL LINE(S) - Check.
- *STEERING HEAD BEARINGS - Adjust.
- *BRAKE SHOES - Inspect and replace if worn.