

AIR CLEANER MAINTENANCE


The air filter element accumulates dust and must be cleaned periodically. If the ATC-70 is ridden in unusually dusty areas, the filter element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the bolt ① and air cleaner cover ②.
2. Remove the filter element from the air cleaner case.
3. Remove air filter element tube ⑤ and support ④ from filter element ③.
4. Wash the filter element in non-flammable or high flash point solvent and allow to dry thoroughly.
5. Soak the filter element in clean gear oil (SAE 80 ~ 90), then squeeze out the excess.


6. Reassemble filter by reversing the disassembly sequence.

WARNING

Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.

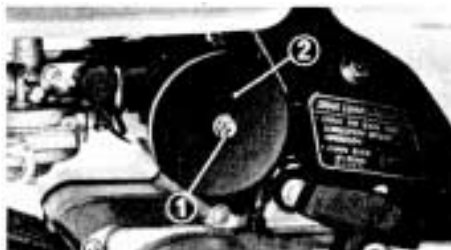

① Bolt ② Air cleaner cover

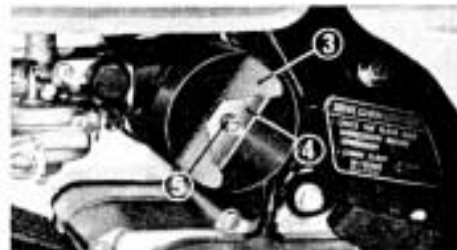

③ Filter element ④ Filter element support
⑤ Filter element tube