

Contact Breaker Point Gap and Ignition Timing Adjustment	31
Spark Plug Replacement and Adjustment	32
Air Cleaner Maintenance	33
Throttle Cable Inspection and Adjustment	34
Carburetor Adjustment	35
Fuel Strainer Maintenance	36
Cam Chain Adjustment	37
Clutch Adjustment	38
Spark Arrester Maintenance	39
RIDING THE HONDA ATC	40
Safety Precautions	41
Turning Maneuvers	42
Climbing Hills	46
Descending Hills	48
Traversing Slopes	49

Riding Through Water	50
Tire Care	51
TRANSPORTING THE ATC.	52
Fuel	52
Removing and Installing the Rear Wheels	53
Removing the Front Wheel	54
Installing the Front Wheel	55
OPTIONAL PARTS	56
SPECIFICATIONS	57
WIRING DIAGRAM	58