

STORAGE

Preparing the ATC for storage:

1. Completely clean all parts of the ATC. If the ATC has been exposed to sea breeze or salt water, wash it down with fresh water and wipe dry.
2. Drain the gasoline from the fuel tank and the carburetor.
3. Change the engine oil.
4. Position the piston at the top of the compression stroke. This can be determined by pulling the starter rope until compression is felt.
5. Cover the ATC with a dust cover.
6. Store in an area which is free of humidity and dust.
7. Inflate the tires to the normal pressure and place the ATC on suitable blocks to raise the tires off the ground.

