

INSTALLING THE FRONT WHEEL


Reinstall the front wheel by reversing the disassembly sequence.

NOTE:

When the front axle is reinstalled, be careful that the grease seal is not cut or damaged.

Always replace used cotter pins with new ones. To reduce the hazard of snagging the ends of the cotter pins, while the ATC is operated, we recommend that the projecting ends of the front axle cotter pins be cut close to the axle nut, as illustrated.

WARNING BE CERTAIN THAT ALL AXLE NUTS ARE TIGHTENED AND SECURED BY COTTER PINS. IF THEY ARE NOT, THE WHEELS MAY BECOME LOOSE DURING OPERATION.

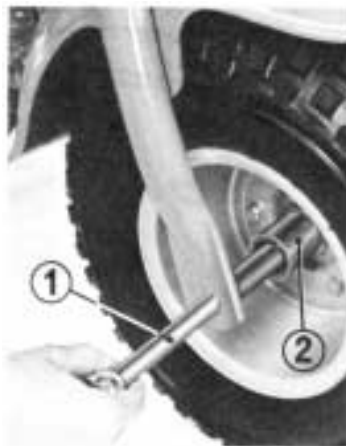

① Front Axle ② Wheel Hub



③ Axle Nut ④ Cotter Pin