


# COMPONENT FUNCTION

## IGNITION SWITCH


The ignition switch ① is on the right handlebar. Turn the switch to ON when starting the engine and to OFF to stop the engine.

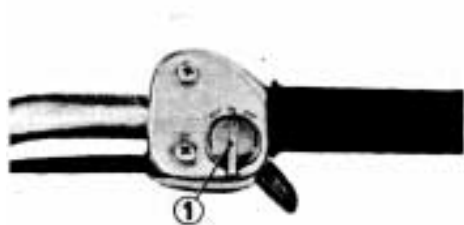

① Ignition switch

## BRAKE LEVER

The brake lever ① is on the left handlebar and applies the brake to the rear wheels only. The brake lever free play should be 15 ~ 20 mm (5/8 ~ 3/4 in) at the tip of the lever.

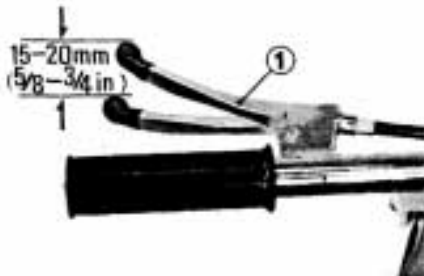

① Brake lever