


ENGINE OIL LEVEL


To check the oil level, place the ATC on level ground and unscrew the dipstick (1). Wipe it dry and reinsert the dipstick in the oil filler hole; do not screw it in. Withdraw the dipstick again and check the oil level. The oil should be between the upper (2) and lower (3) marks on the dipstick.

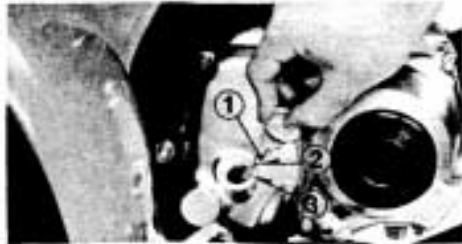

- ① Dipstick
- ② Upper oil level mark
- ③ Lower oil level mark

THROTTLE LEVER

The throttle lever ① is on the right handlebar grip and is operated by the rider's thumb. Pressing the lever forward opens the throttle. When the lever is released, spring tension closes the throttle automatically.

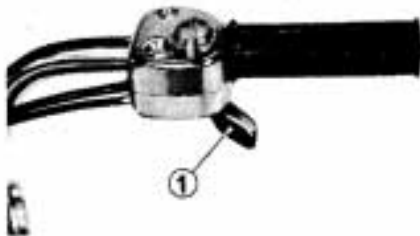

- ① Throttle lever