
MAINTENANCE OPERATIONS	38
Engine Oil Level	38
Engine Oil Change	38
Brake Adjustment	40
Drive Chain Adjustment	42
Drive Chain Lubrication	43
Valve Clearance Adjustment	44
Contact Breaker Point Gap and Ignition Timing Adjustment	46
Spark Plug Replacement and Adjustment	47
Air Cleaner Maintenance	48
Throttle Cable Inspection and Adjustment	49
Carburetor Adjustment	50
Fuel Filter Maintenance	51

Clutch Adjustment	52
Spark Arrester Maintenance	53
TRANSPORTING THE ATC	54
Fuel	54
Removing and Installing the Rear Wheels	55
Removing the Front Wheel	56
Installing the Front Wheel	57
STORAGE	58
NOISE EMISSION CONTROL SYSTEM (USA ONLY)	59
SPECIFICATIONS	60
WIRING DIAGRAM	61
WARRANTY SERVICE	64