

THROTTLE CABLE INSPECTION AND ADJUSTMENT

Inspect the condition and operation of the throttle cable. The throttle cable must not impair smooth operation of the throttle lever in any steering position.

Reroute the cable if it is improperly installed. Replace the cable if it has become worn or kinked.



Lubricate the throttle cable with a commercially available cable lubricant to prevent premature wear and corrosion.

Free play, measured at the tip of the throttle lever, should be maintained at 5 ~ 10 mm (3/16 ~ 3/8 inch).

The adjusting nut is located at the top of the carburetor, against the end of the throttle cable housing. Slide the rubber sleeve ① back to expose the throttle cable adjuster ②. Turn the adjuster until the specified free play is obtained. Reinstall the sleeve after adjustment.

NOTE:

* Note the band ③ positions when removing them.

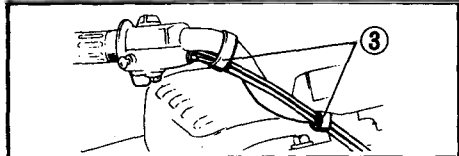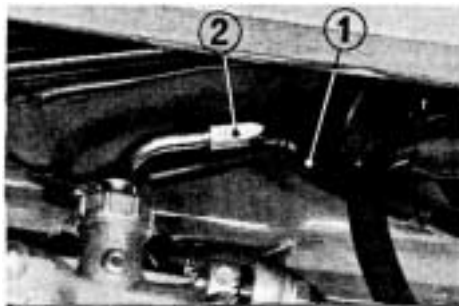

① Rubber sleeve ② Throttle cable adjuster
③ Bands