



Shifting sequence

NEUTRAL INDICATOR

The neutral indicator ① is located on the left crankcase cover, just behind the recoil starter. This feature enables the rider to see that neutral has been selected before starting the engine.

The indicator rotates as the gears are changed. When the indicator aligns with the "N" mark on the crankcase, the transmission is in neutral.



① Neutral indicator