


MAINTENANCE OPERATIONS

ENGINE OIL LEVEL

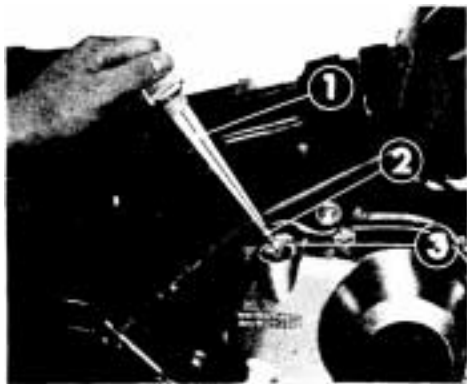

- ① Dipstick
- ② Upper level mark
- ③ Lower level mark

Check engine oil level at the start of each day the **ATC 90** is to be ridden. Raise or remove the seat for better access to the engine oil filler cap. The oil filler cap contains a dipstick for measuring oil level.

Oil level should be checked with the **ATC 90** resting on level ground and with the oil filler cap touching the filler orifice but not screwed in.

Oil level should be maintained between the upper and lower oil level marks on the dipstick.

ENGINE OIL CHANGE

Engine oil should be changed in accordance with the maintenance schedule on pages 21 and 22. Use motor oils of the grade and viscosity recommended on page 12.

When changing oil, drain the used oil from the crankcase while the engine is still warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap from the right crankcase cover.