


BRAKE ADJUSTMENT

Free play measured at the end of the brake pedal, should be maintained at 0.6–0.8 inch.

The adjusting nut is located on the brake operating rod at the rear of the frame.

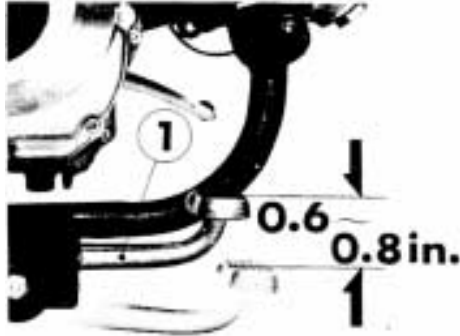

① Brake pedal



② Adjusting nut