


Brake Lever :

Free play, measured at the tip of the brake lever, should be maintained at 0.8–1.2 inch.

Adjusting nuts are located at the brake cable mounting on the right side of the frame just behind the engine.

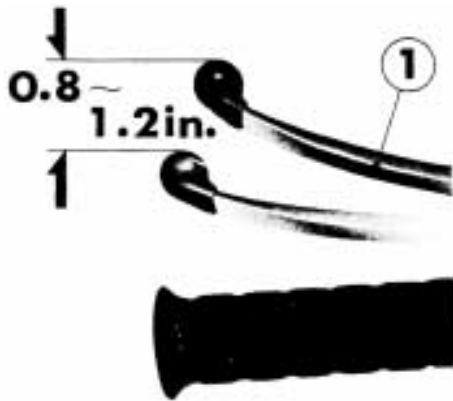

① Brake lever



② Adjusting nuts