



## CAM CHAIN ADJUSTMENT

Too tight or too loose a cam chain will adversely affect the engine. Make tension adjustment while the engine is idling.

1. To adjust, loosen the lock nut ①, and loosen tensioner adjust bolt ② approximately one half turn.
2. If the chain is still noisy even after the above adjustment, loosen the 14 mm sealing bolt located on the left bottom side of the crankcase, and screw in the tensioner bolt ③ gradually until the cam chain becomes quiet. After completing the adjustment, tighten the tensioner adjust bolt, lock nut, and 14 mm sealing bolt securely.

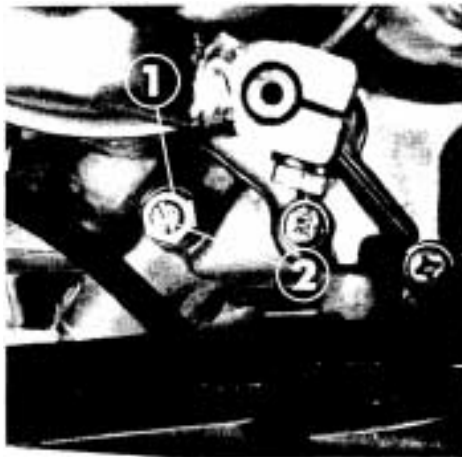

① Lock nut ② Tensioner adjust bolt

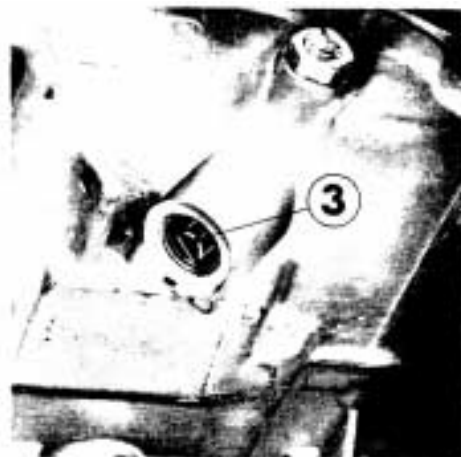

③ Tensioner bolt