



AXLE CAP
COTTER PIN
AXLE NUT
WASHER



TRANSPORTING THE ATC (Continued)

REMOVING THE REAR WHEELS

1. Unlatch the seat and remove it from the ATC.
2. Remove the axle cap from the right rear wheel.
3. Remove the cotter pin which secures the axle nut.
4. Loosen the axle nut, using the 19 mm socket. Remove the axle nut and washer.
5. Remove the wheel and wheel spacer from the axle.
6. Remove the axle and left rear wheel from the ATC.
7. The left rear wheel may be removed from the axle following the same procedure used to remove the right rear wheel.