

TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

NOTE:

- * Tyre pressure should be checked before you ride while the tyres are "cold".

On-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications. Check the tyres for cuts, embedded nails, or other sharp objects. See your authorized Honda dealer for replacement of damaged tyres or punctured inner tubes.

| | | Front | Rear |
|--|-------------------------------|-------------------|----------------------|
| Tyre size | | 3.00-18 47P | 130/90- 15M/C 66P |
| Cold tyre pressures kPa (kg/cm ² , psi) | Rider only | 200 (2.00, 29) | 200 (2.00, 29) |
| | Rider and one passenger | 200 (2.00, 29) | 200 (2.00, 29) |
| Tyre brand DUNLOP YOKOHAMA | | F11 Y-992 | K627 Y-993 |