

SIDE COVER

The right side cover must be removed for the air cleaner maintenance. The left side cover must be removed for fuse maintenance.


The right and left side covers can be removed in the same manner.

Removal:

1. Remove the seat (page 79).
2. Remove the bolts (1).
3. Remove the prongs (2) from the grommets (3).

Installation:

- Installation can be done in the reverse order of removal.

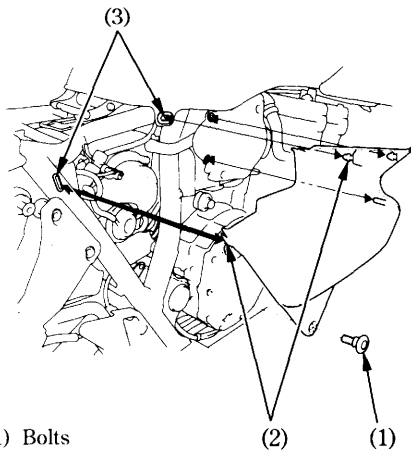

- (1) Bolts
- (2) Prongs
- (3) Grommets