


Changing the oil requires a torque wrench. If you do not have it and the necessary skill, we recommend that you have your authorized Honda dealer perform this service. If a torque wrench is not used for this installation, see your authorized Honda dealer as soon as possible to verify proper assembly.

**NOTE:**

- \* Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

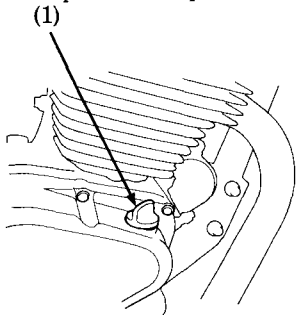

(1) Oil filler cap

1. To drain the oil, remove the oil filler cap (1), crankcase drain plug (2) and sealing washer (3).


**▲ WARNING**

- \* **A warmed-up engine and the oil in it are hot; be careful not to burn yourself.**

2. Check that the sealing washer on the drain plug is in good condition and install the plug.

Oil Drain Plug Torque:

25 N·m (2.5 kgf·m, 18 lbf·ft)

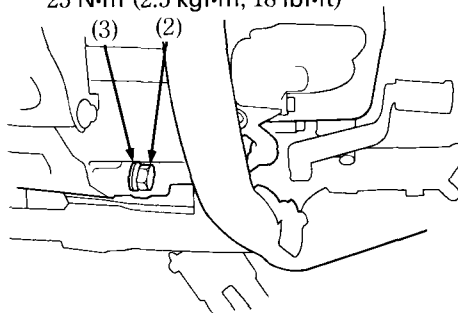

(2) Oil drain plug

(3) Sealing washer